










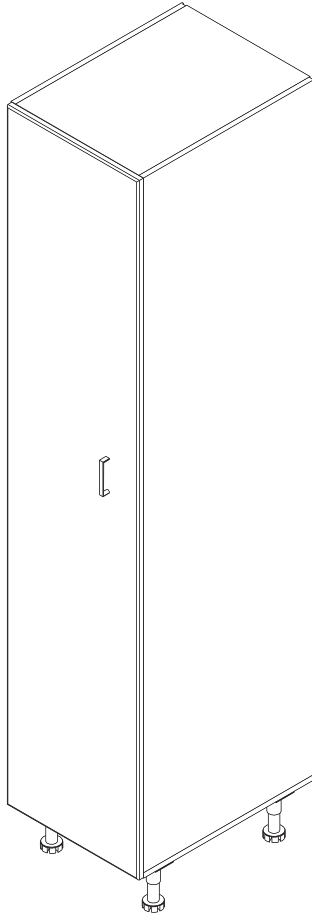




450mm 1 DOOR TALL CUPBOARD












Hardware Included



			
Cam & Pin x 48	28mm Wood Screws x 6	14mm Wood Screws x 28	Handle Screws x 2
			
Door Hinges x 4	Handle x 1	Adjustable Feet Screws x 16	Adjustable Feet x 4
			
1 Inch Nail x 40	Shelf Support x 4	Door Buffer x 2	Sticker on Cam Caps x 18
			
Sticker on Caps x 8			


Tools you will need

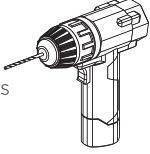To put your cabinets together you will need the following tools.


 Cordless drill with: • Number 2 Phillips head bit • 4.5mm drill bit • Number 12 countersinking drill bit	 Tape Measure	 Pencil	 Hammer	 Clamps (Quick Release)	 Safety Gear	 Phillips Head Screw Driver
 Spirit Level (900mm recommended)	 Masking Tape	 65mm Wood Screw	 Wall Fixing (If Necessary)			

Important notice


- Make sure you leave plumbing and electrical work to qualified trades people. Never try this yourself.
- If you have any questions contact us on **1800 666 078** Monday to Friday between 8:00am and 6:00pm AEST or email: info@flatpax.com.au.

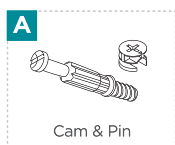


STEP 1

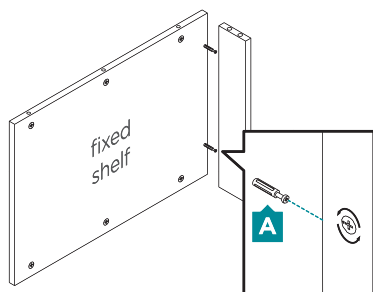


STEP 2

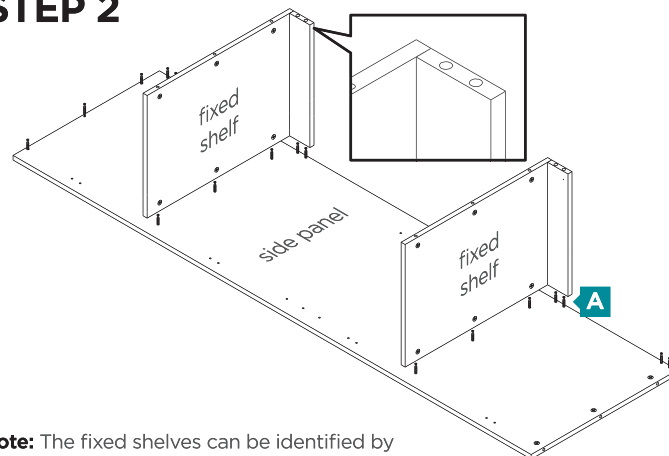


STEP 3

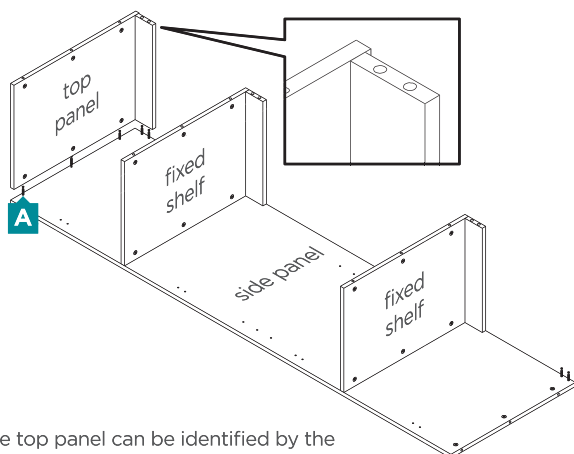


STEP 4

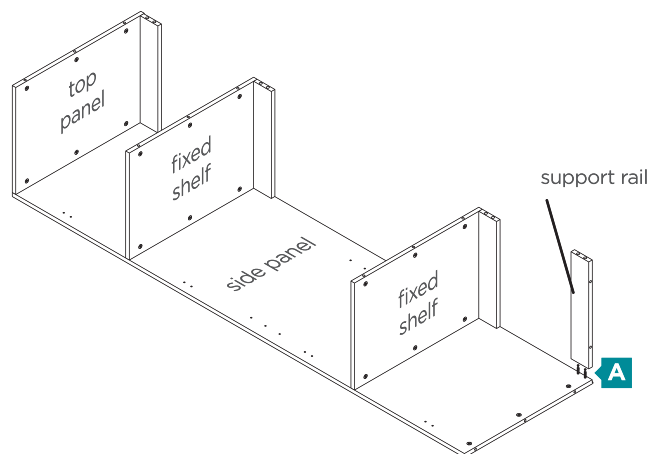


STEP 5

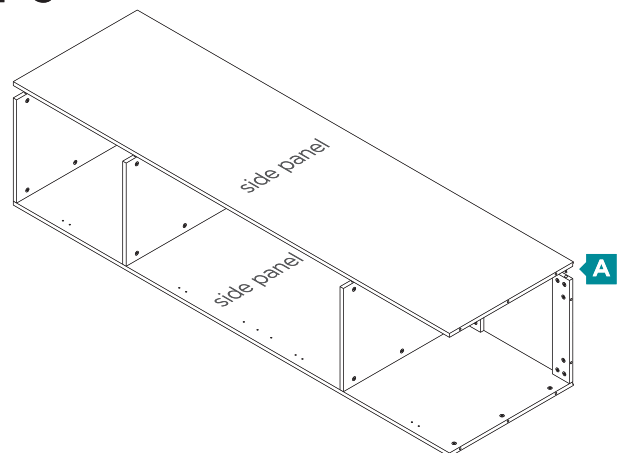


STEP 6

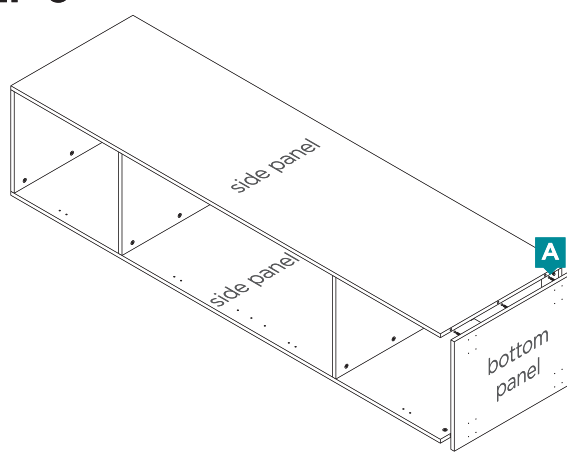

450mm 1 DOOR TALL CUPBOARD

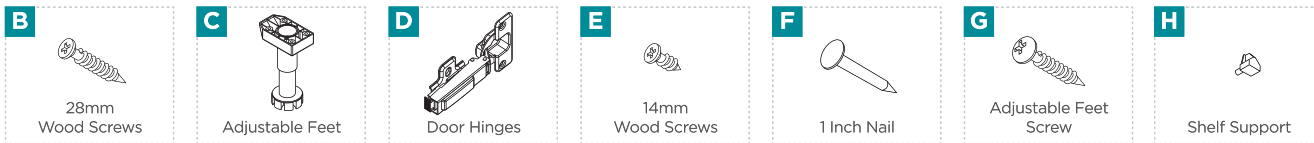


STEP 7

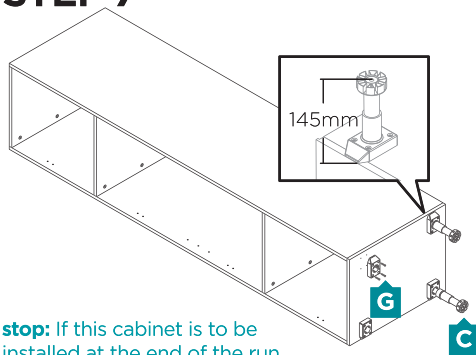


stop: If this cabinet is to be installed at the end of the run refer to the kickboard instructions now on the correct placement of the feet. Set the height of the adjustable feet to 145mm to suit the kickboard.

STEP 8

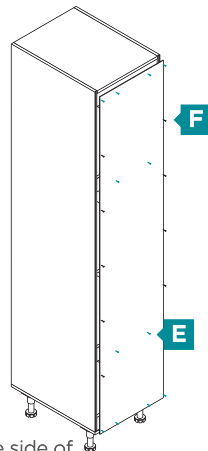


note: The white side of the back panel should face inside the cabinet.


STEP 9

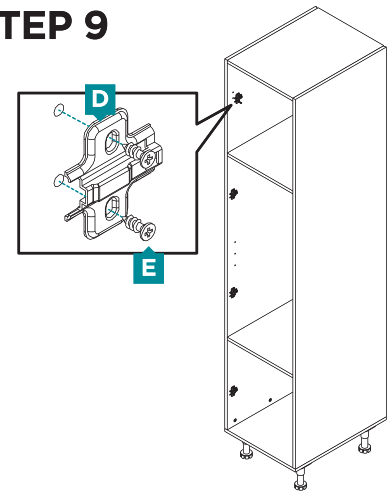

STEP 10

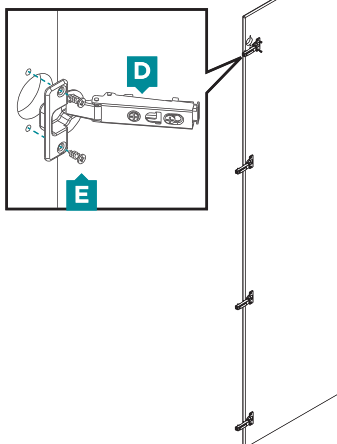


STEP 11

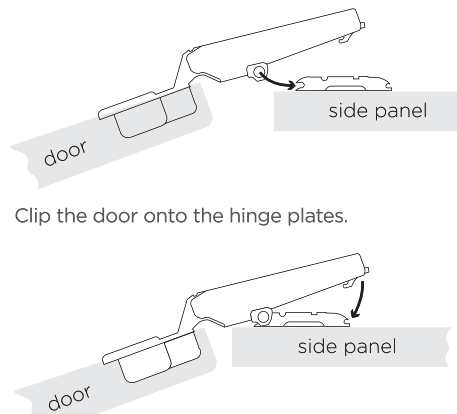


Clip the door onto the hinge plates.

Now push down to clip hinge securely together.

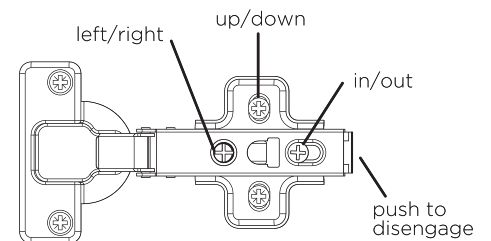


To align doors adjust marked screws.

STEP 12

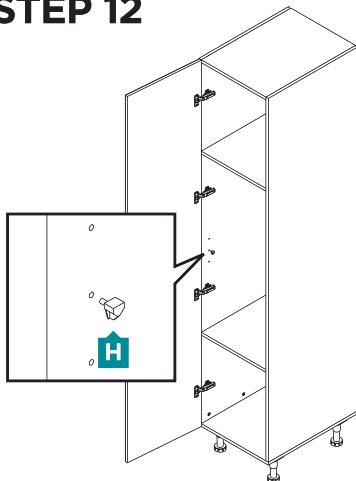


STEP 13

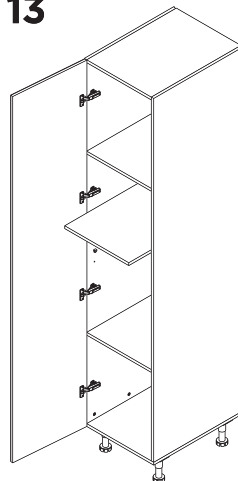

450mm 1 DOOR TALL CUPBOARD




STEP 14

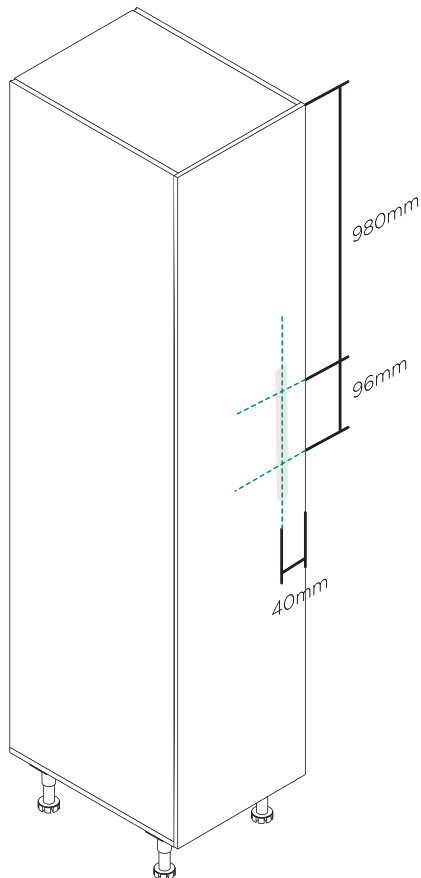


Place masking tape on both sides of the door where holes will be drilled to avoid chipping. Pre drill using 4.5mm drill bit

STEP 15

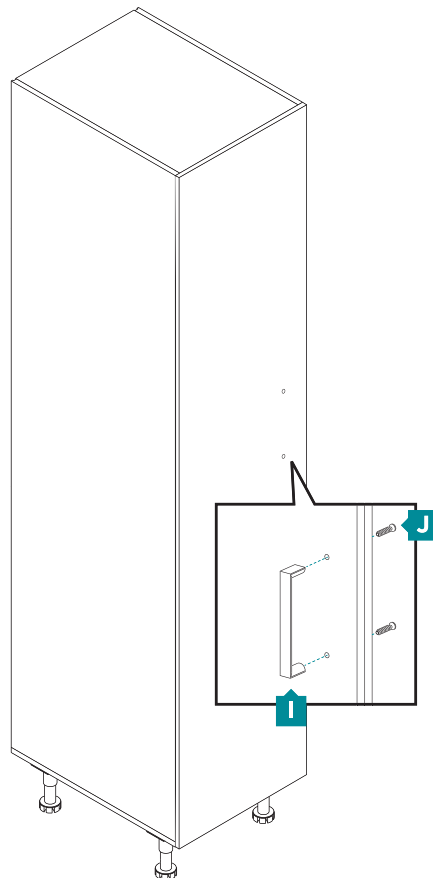


STEP 16

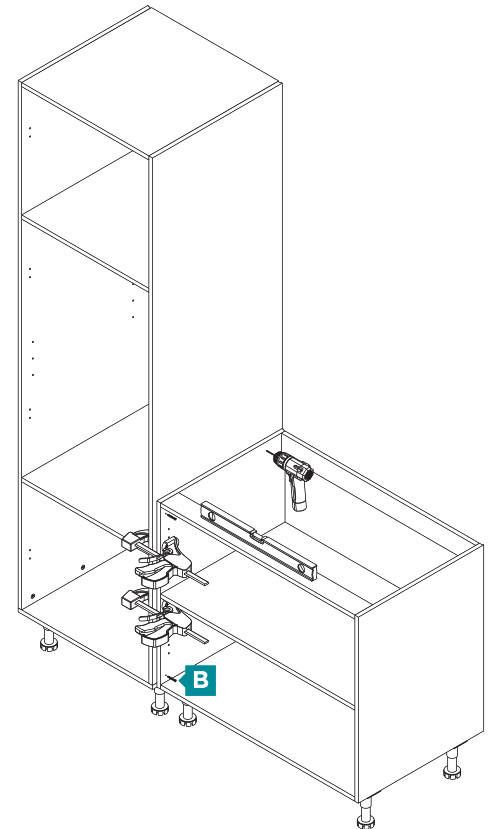

Check cabinets are level then clamp together. Pre-drill using 2mm drill bit and attach cabinets together.

STEP 17

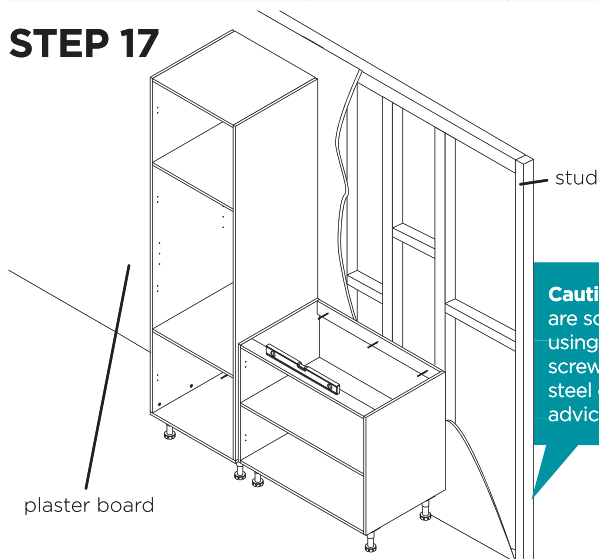

Caution: Please ensure all cabinets are screwed into your timber stud wall using a minimum of 65mm timber screws. If attaching to concrete, brick, steel or any other substrates seek advice from your hardware specialist.