![FLATPAX UTILITY logo]

300mm
1 DOOR WALL CUPBOARD

Hardware Included

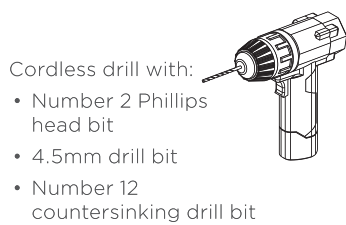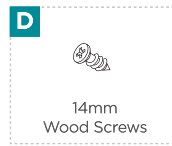|		
Cam & Pin **x 30**	28mm Wood Screws **x 4**	Door Hinges **x 2**
14mm Wood Screws **x 17**	1 Inch nail **x 20**	Handle **x 1**
Handle Screws **x 2**	Door Buffer **x 2**	Stick on Cam Caps **x 18**	Stick on caps **x 8**

Tools you will need

To put your cabinets together you will need the following tools.

Cordless drill with:
- Number 2 Phillips head bit
- 4.5mm drill bit
- Number 12 countersinking drill bit

Tape Measure

Pencil

Hammer

Clamps (Quick Release)

Safety Gear

Phillips Head Screw Driver

Spirit Level (900mm recommended)

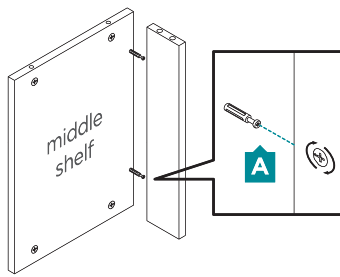Masking Tape

65mm Wood Screw

Wall Fixing (If Necessary)
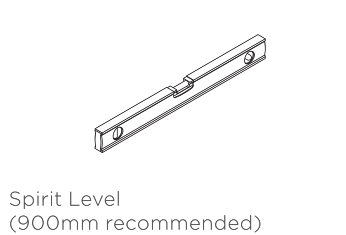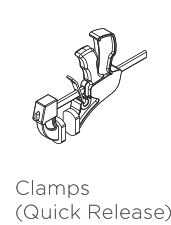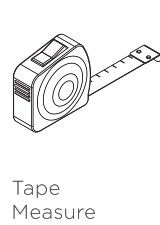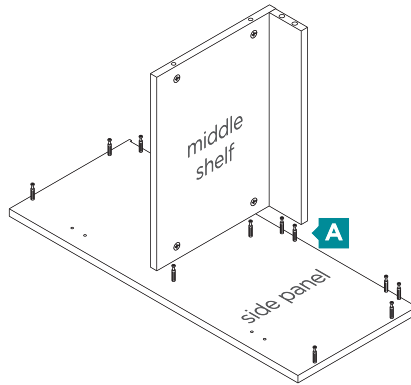
Important notice

- Make sure you leave plumbing and electrical work to qualified trades people. Never try this yourself.

- If you have any questions, contact us on: **Australia: 1800 666 078** Monday to Friday between 8:00am and 6:00pm AEST, **New Zealand: 0800 522 663** Monday to Friday between 8:00am and 5:30pm NZST or email: **info@flatpax.com.au**

FLATPAX™ UTILITY

300mm
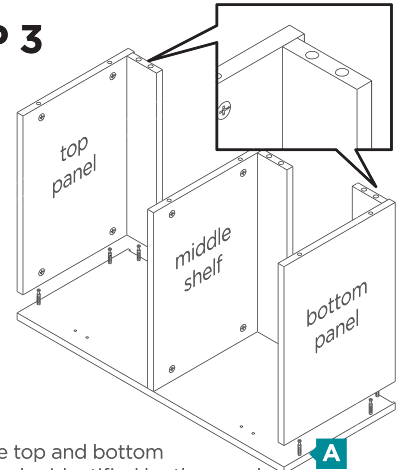# 1 DOOR WALL CUPBOARD

A Cam & Pin

C Door Hinges

D 14mm Wood Screws

E 1 inch Nail

STEP 1

middle shelf

A

STEP 2

middle shelf

side panel

A

STEP 3

top panel

middle shelf

bottom panel

A
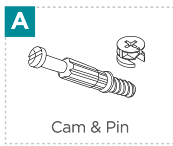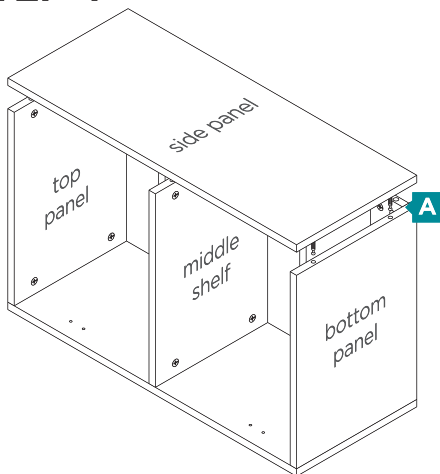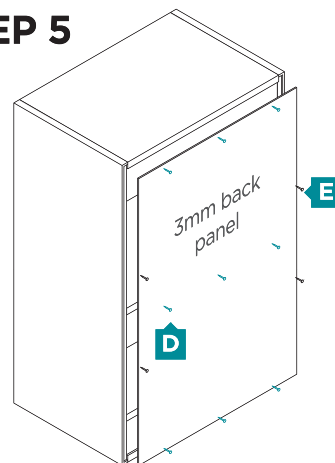
note: The top and bottom panel can be identified by the panel protruding past the support rail 5mm.

STEP 4

side panel

top panel

middle shelf
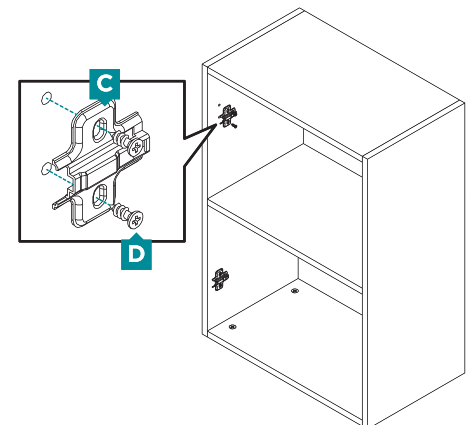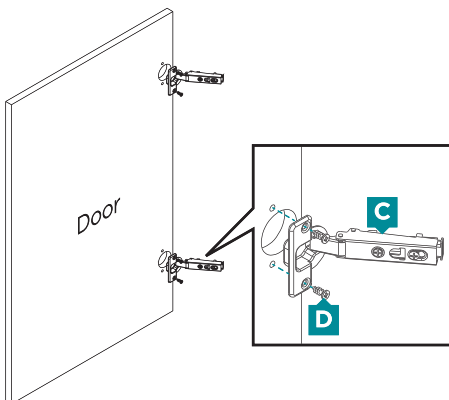
bottom panel

A

STEP 5

3mm back panel

E

D

note: The white side of the back panel should face inside the cabinet.

STEP 6

C

D

STEP 7

Door

C

D

STEP 8

door

side panel

door

side panel
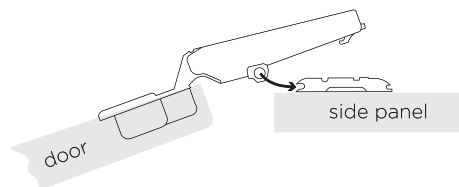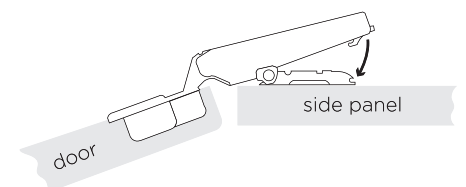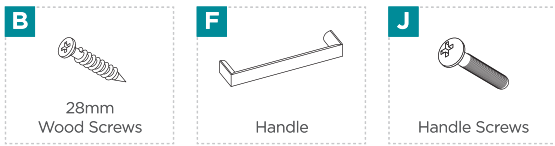
Clip the door onto the hinge plates.

Now push down to clip hinge securely together.

B 28mm Wood Screws

F Handle

J Handle Screws

STEP 8

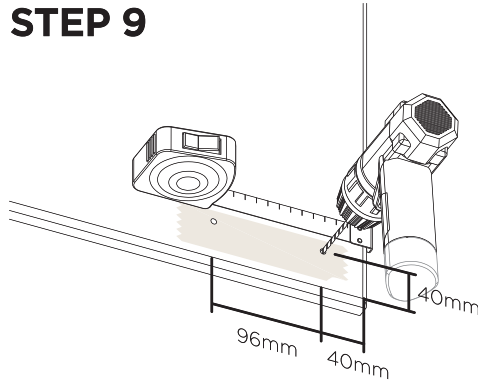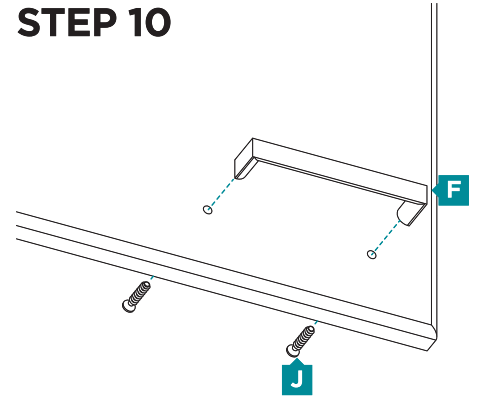left/right   up/down   in/out   push to disengage
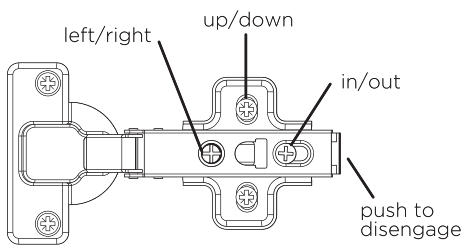
To align doors adjust marked screws.

STEP 9

96mm   40mm   40mm
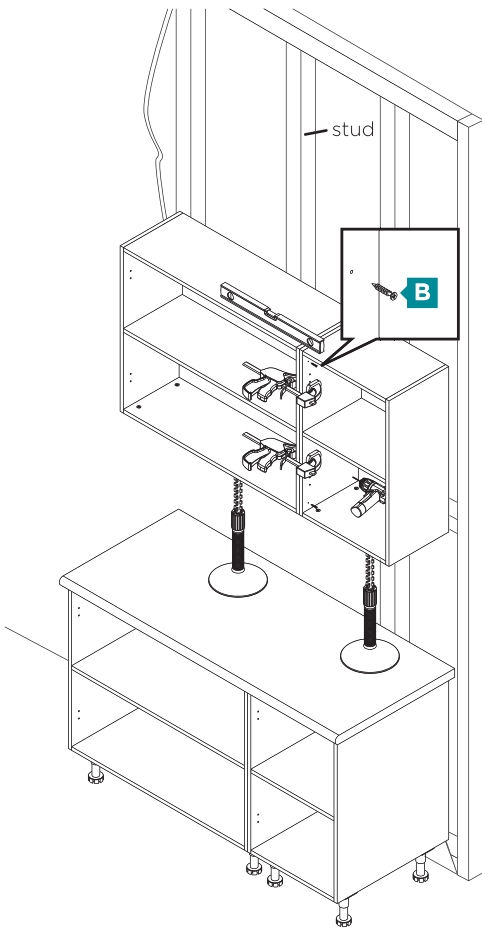
Place masking tape on both sides of the door where holes will be drilled to avoid chipping. Pre-drill using 4.5mm drill bit

STEP 10

F   **J**

STEP 11

stud   **B**
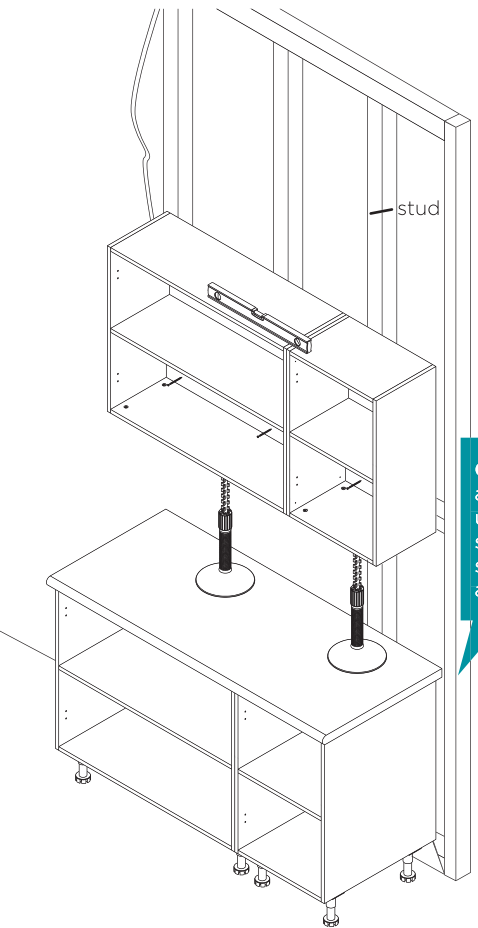
Check cabinets are level then clamp together. Pre-drill using 2mm drill bit and attach cabinets together.

STEP 12

stud

Caution: Please ensure all cabinets are screwed into your timber stud wall using a minimum of 65mm timber screws. If attaching to concrete, brick, steel or any other substrates seek advice from your hardware specialist.